tempmate

Configuration



°F

Required Temperature

Departure Port

Start Time Start Date

Arrival Port

Logger Serial No.

Contents

Truck No.

B/L No. Ref No.

Shipper

Brief operating instructions inside **②**

Important Notes

- Please, select the manual flight mode if you want to send goods with air fright.
- ◆ If you ship more than one **temp**mate.®-GS, you must place a "UN3091" Battery Warning Label" outside the parcel. You can find a template of this label at our website http://www.tempmate.com/product/tempmate-gs/.
- A stopped tempmate.®-GS cannot be started again.
- Do not place **temp**mate. •-GS into corrosive liquid or expose to direct heat.
- Batteries of tempmate. 9-GS are two non-exchangeable CR17450 lithium batteries.
- Store **temp**mate. 9-GS under room temperature conditions and do not use expired devices.
- Please, dispose the tempmate.º-GS in accordance with local laws and regulations

Visit www.tempmate-gs.com for further information.

tempmate GmbH Edisonstr. 25 74076 Heilbronn Germany

info@tempmate.com www.tempmate.com **CAUTION** Temperature monitoring in progress.

User Manual - tempmate. GS Single-Use GSM Logger



Product Overview

This document describes specific validation procedures executed for **temp**mate. O-GS, in order to ensure the proper operation of **temp**mate. O-GS data loggers and provide a reliable temperature and time recording during transportation and storage.

Technical Specifications

Recording Options	Single-Use GSM-Logger		
Temperature Range	-40 °C to +90 °C		
Temperature Accuracy	±0.2°C(-0°C/+90°C);±0.3%		
Temperature Resolution	<0.1°C		
Data Storage Capacity	Max. 15600 Records		
Humidity	0 to 100%rH / Accuracy [090%rH] < ±2.5%, [90%100%] < ±3.5%		
Resolution Humidity	1%		
Ambient Light	0 to 16.000lx / Accuracy < 10%		

Resolution Ambient	1lx
Shelf Life	2 Years at -25°C to +35°C
Battery	2x CR17450 lithium battery
Recording Interval	10 Minutes Standard
Recording Duration	90 Days Standard
Startup Mode	Button
Stop Mode	Button
Start Delay	1 Minute to 48 Hours Possible
Protection Class	IP67 / NEMA 6
Dimensions	115/61/26 mm (l/w/h)

Technical Specifications

Weight	165g	Location	GSM Localization
Certifications	CE, EN12830, EMC, RoHS	G Sensor	3-axis 6D-/4D- orientation detection/
Validation Certificate	As PDF in the Cloud	Alarm Configuration	±16g / Accuracy: < ±2%
Software	tempbase.®-C Cloud		Up to 6 Thresholds, Alarm Delay Programmable
Report Generation	Readable in Cloud	Programmable	Cloud
		Alarm Type	Single / Cumulative
Password Protecion	Cloud Password Protection		-25°C to +35°C (room temperature suggested)
Data Transfer	GSM Quad Band	Storage Temperature	
Case Material	Polycarbonate		

Operation Instructions



Sign in or register at www.tempmate.cloud.



Enter the serial number of the device you want to register, by choosing **Devices - Add New Device** in the menu



Choose your settings to configure the device or use the default settings.



Start your device by pushing the button for at least 5 seconds. While puishing, the **green LED** should be litten up. A successful start is indicated by 10 times flashing **green LED**.



An active device is indicated by flashing green or red LED every 5 seconds.

- ◆ green = OK; no alarm
- red = alarm
- ♦ blue = the last upload was successfull



You can monitor your active device in your tempmate. •-Cloud account.



To stop the device you must push the button for at least 5 seconds. While pushing, the **red LED** should be litten up. A successful stop is indicated by 10 times flashing **red LED**.

Find more important notes on the back.

© tempmate-gs.com V1.0 V1.0 © tempmate-gs.com